



MotobriizTM.com
 Wind Powered Automatic Chain Oilers
Chain Applicator Size Guide

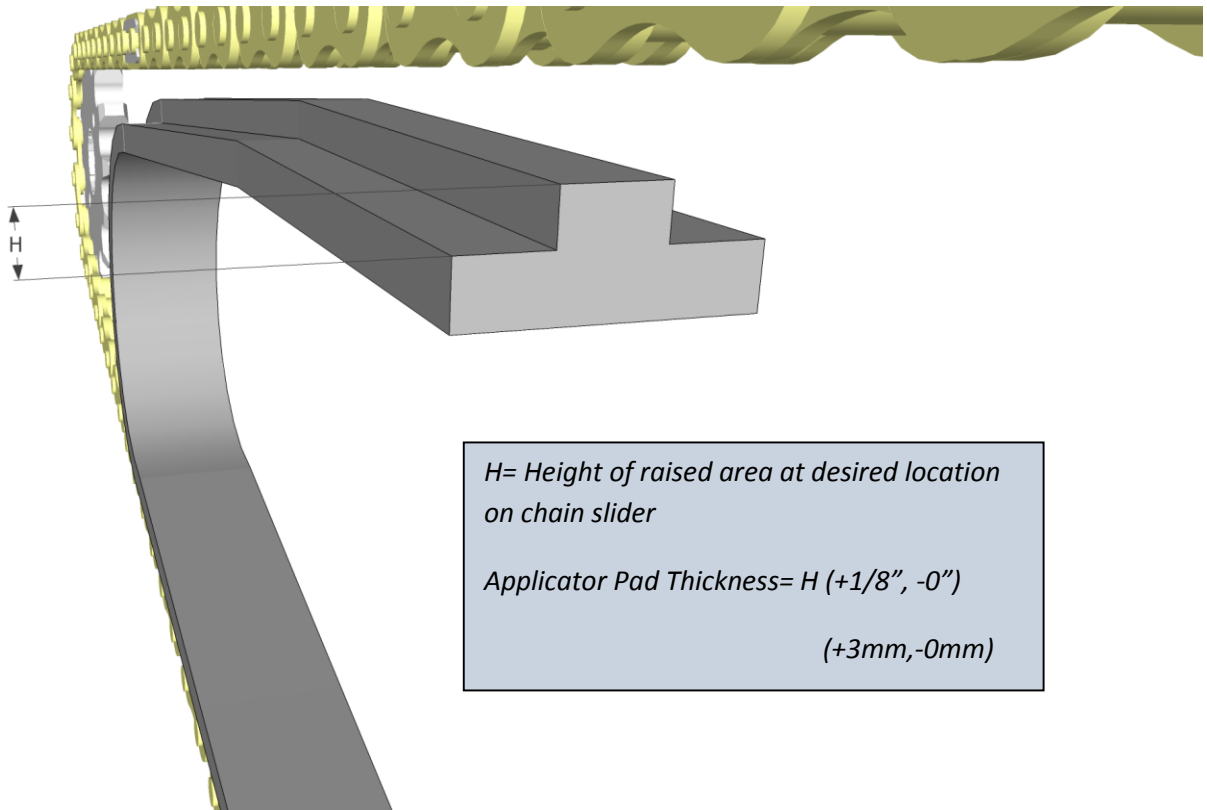

H = Height of raised area at desired location on chain slider

Applicator Pad Thickness = H (+1/8", -0")
(+3mm, -0mm)

1. Measure the height (H) of the raised area on your chain slider at the desired location. Note that on most chain sliders, the height of the raised portion varies along the length, so be sure to measure at the location where you want to place the chain applicator.
2. The thickness of the chain applicator should be at least the measured height (H) and up to 1/8" (3mm) thicker.

<i>Measured Height (H)</i>	<i>Recommended Chain Applicator Thickness</i>
<i>1/4" (6mm)</i>	<i>1/4" to 3/8" (6-10mm)</i>
<i>3/8" (10mm)</i>	<i>3/8" to 1/2" (10-13mm)</i>
<i>1/2" (13mm)</i>	<i>1/2" to 5/8" (13-16mm)</i>

Any questions, please contact us at info@motobriiz.com . Thank you for choosing Motobriiz and ride safe!